

metori

Designed for Better Living

Didesain untuk Kehidupan yang Lebih Baik

Distributed by:
PT. MITU PERALATAN RUMAH TANGGA

Website: www.metori.id


Email: service@metori.id

PIK 2 Edu City, Ruko Harvard RHS-5 Salemban Jati,
Kosambi, Kabupaten Tangerang, Banten 15214, Indonesia

metori




BUKU PETUNJUK PENGUNAAN

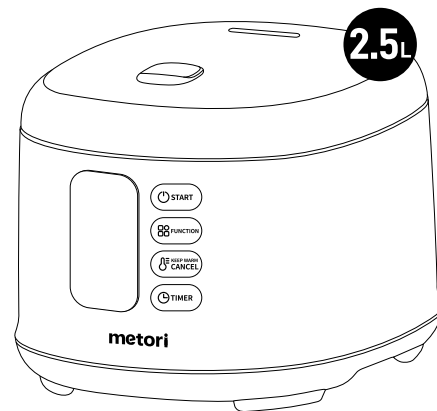

Penanak Nasi Pintar Lapisan Titanium

MTHCSG-KCRC-025-R1, MTHCSG-KCRC-025-W1

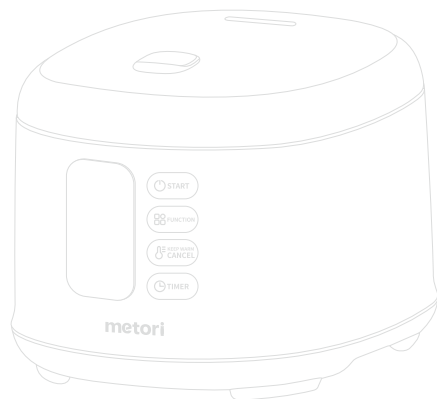

Harap baca buku petunjuk ini dengan saksama sebelum digunakan. Setelah membaca, simpanlah untuk referensi di masa mendatang.

Buku petunjuk ini adalah edisi pertama untuk seri produk ini dan berisi semua fungsi dari seri ini. Pengguna harus membaca buku petunjuk ini secara teliti dan selektif sesuai dengan model dan konfigurasi produk yang dimiliki.

Penanak Nasi Pintar Lapisan Titanium

> Daftar Isi

Peringatan	01
Spesifikasi Produk	02
Penjelasan Struktur	02
Petunjuk Penggunaan	03
Analisis Kerusakan Umum	04
Perawatan & Perbaikan	05

PERINGATAN

Baca buku petunjuk dengan teliti sebelum digunakan agar dapat mengoperasikan penanak nasi dengan benar dan perhatikan semua petunjuk keselamatan
Produk kami terus dikembangkan, spesifikasi dapat berubah tanpa pemberitahuan terlebih dahulu.

PETUNJUK PENTING

1. Jangan gunakan stop kontak colokan banyak yang sama bersama peralatan listrik lainnya
2. Jumlah air di panci dalam tidak boleh melebihi garis skala maksimal, jika tidak air dapat meluap.(Gbr.5)
3. Letakkan alat di permukaan yang rata dan stabil; jangan taruh penanak nasi di tempat lembap atau dekat sumber panas
4. Jangan merendam seluruh peralatan ke dalam air atau membilasnya langsung, agar tidak merusak isolasi listrik. (Gbr.6)
5. Jangan mencuci beras di dalam panci dalam atau membenturkan panci, hal ini akan merubah bentuk panci sehingga tidak menempel rapat dengan termostat dan piring pemanas, sehingga mengganggu hasil masak nasi.
6. Jangan nyalakan daya jika panci dalam tidak terpasang atau tidak ada air di dalam panci dalam.
7. Simpan alat di tempat yang tidak terjangkau bayi dan anak-anak; jangan biarkan anak-anak menggunakannya sendirian.
8. Lubang uap sangat panas saat memasak. Jangan sentuh dengan tangan atau tutup dengan kain agar tidak terkena luka bakar atau terjadi kerusakan mesin. (Gbr.7)
9. Gunakan hanya sendok nasi bawaan (atau sendok kayu) saat mengambil nasi; sendok logam akan menggores lapisan anti lengket panci dalam. Panci dalam tidak boleh dipanaskan di kompor lain. (Gbr.8)
10. Jangan sentuh piring pemanas langsung setelah selesai masak agar tidak terkena luka bakar.
11. Produk ini hanya cocok untuk penggunaan rumah tangga atau tempat sejenisnya.
12. Jangan menarik atau memelintir kabel daya dengan tenaga berlebih; jangan cabut steker saat tangan basah. Saat mencabut, pegang bagian steker, jangan hanya tarik kabelnya
13. Periksa apakah steker dan kabel daya ada kerusakan sebelum dipakai guna menghindari bahaya sengatan listrik atau kebakaran. Jangan letakkan barang mudah terbakar di dekat stop kontak saat alat beroperasi.
14. Cabut kabel daya jika penanak nasi tidak digunakan.
15. Jangan membongkar atau memperbaiki penanak nasi sendiri
16. Jika kabel daya rusak, harus diganti dengan kabel fleksibel khusus atau suku cadang asli yang dibeli dari pabrik atau departemen servisnya
17. Persyaratan lingkungan penggunaan: Suhu lingkungan: 10°C +40°C; Kelembapan udara relatif maksimal: 90% (pada suhu 25°C); Ketinggian tempat: <2000m



(Gbr.5)



(Gbr.6)



(Gbr.7)



(Gbr.8)

PETUNJUK PENYIMPANAN HANGAT

1. Jangan tinggalkan sendok nasi atau benda lain di dalam panci saat mode hangat aktif.
2. Tutup panci dengan rapat selama nasi disimpan dalam keadaan hangat agar nasi tidak menjadi kering.
3. Jangan mencampurkan nasi dingin atau makanan lain dengan nasi yang baru matang selama proses penghangatan.
4. Jangan menjaga nasi tetap hangat lebih dari 2 jam karena dapat menyebabkan nasi berubah warna dan berbau tidak sedap. Segera konsumsi nasi setelah dimasak.



SPESIFIKASI TEKNIS

Spesifikasi yang tercantum dalam manual ini berlaku untuk beberapa model. Silakan mengacu pada spesifikasi produk yang Anda terima.

Nama Produk	metori Penanak Nasi Pintar Lapisan Titanium
Model Produk	MTHCSG-KCRC-025-R1, MTHCSG-KCRC-025-W1
Warna	Merah, Putih
Kapasitas	2,5 L
Tegangan Terukur	220-240 V~
Frekuensi Terukur	50Hz
Daya Terukur	400W


STRUKTUR PRODUK

Terima kasih telah memilih penanak nasi merek kami. Agar produk ini dapat melayani Anda dengan maksimal, bacalah buku petunjuk ini secara teliti sebelum menggunakan alat. Simpanlah buku petunjuk dengan baik setelah dibaca untuk dapat dilihat kembali di kemudian hari.

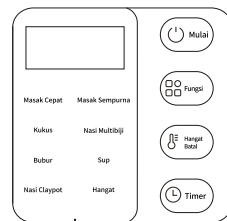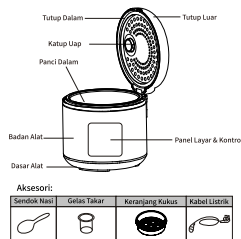

Panel Layer & Kontrol

PETUNJUK PENGGUNAAN

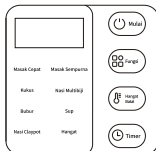

I. Penjelasan Status

Status Penyalan Daya: Saat terhubung daya 220V, tabung digital dan semua lampu indikator akan menyala selama 1 detik disertai satu bunyi "bip" dari buzzer, kemudian alat masuk ke mode siaga. Status Siaga: Tabung digital menampilkan tulisan "----"; hanya tombol fungsi dan tombol penghangat yang dapat dioperasikan pada status ini.

II. Penjelasan Tombol (Panel Tipe Tombol Tekan)

Tombol Mulai: Setelah memilih fungsi, tekan tombol ini untuk masuk ke mode kerja yang sesuai. Setelah mengatur durasi penjadwalan, tekan tombol ini untuk memulai hitung mundur penjadwalan.

Tombol Fungsi: Tekan tombol ini berulang untuk berganti fungsi dengan urutan: Masak Cepat, Masak Halus, Pengukusan, Nasi Gandum, Bubur, Merebus Sup, Nasi Claypot. Saat satu fungsi terpilih, lampu indikator fungsi terkait dan tabung digital berkedip bergantian, sedangkan lampu indikator fungsi lainnya tetap menyala terang.

Tombol Hangat/Batal: Tekan tombol ini di mode siaga untuk mengaktifkan fungsi penghangat; lampu indikator penghangat menyala, lampu indikator fungsi lain padam, dan tabung digital menampilkan "bb". Jika alat berada di mode penjadwalan atau mode kerja, tekan tombol ini untuk menghentikan fungsi yang berjalan dan kembali ke mode siaga.

Tombol Penjadwalan: Setelah memilih fungsi, tekan tombol ini untuk mengatur waktu penjadwalan. Durasi penjadwalan bawaan adalah 30 menit, rentang penyesuaian 30 menit hingga 24 jam dengan peningkatan tiap 30 menit; Anda bisa menekan lama tombol ini untuk penyesuaian cepat.

ANALISIS KERUSAKAN UMUM

pemeriksaan satu per satu sesuai tabel berikut.

Nasi terlalu keras	★		★	★	★	★													
Nasi kurang matang	★			★	★														★
Nasi terlalu lembek	★				★		★												
Air rebusan meluap keluar	★	★				★													
Kerak nasi di dasar panci gosong hitam	★	★		★	★													★	
Timbul bau aneh saat mode penghangat aktif			★			★	★		★	★		★	★	★	★	★	★	★	★
Nasi berubah warna saat mode penghangat aktif						★	★			★									
Nasi menjadi kering saat mode penghangat aktif											★								
Kondisi Tidak Normal	Perbandingan takaran beras dan air tidak sesuai Beras tidak dicuci bersih Dasar panci dalam tidak rata Tutup atas tidak tertutup rapat Terdapat benda asing menempel di luar panci dalam atau pinggir pemangas Nasi tidak dididuk gembur setelah proses masak selesai Nasi disimpan hangat lebih dari 12 jam, atau jumlah nasi terlalu sedikit untuk dihangatkan Sendok nasi tertinggal di dalam panci saat penghangatan Menghangatkan nasi sisa dingin Tutup panci tidak tertutup rapat; panci dalam tidak dibersihkan Menghangatkan nasi sisa dingin Setelah daya dicabut saat proses memasak masih berlangsung Tutup panci tidak tertutup rapat; panci dalam tidak dibersihkan Menghangatkan nasi sisa dingin Sendok nasi tertinggal di dalam panci saat penghangatan Nasi disimpan hangat lebih dari 12 jam, atau jumlah nasi terlalu sedikit untuk dihangatkan Nasi tidak dididuk gembur setelah proses masak selesai Nasi disimpan hangat lebih dari 12 jam, atau jumlah nasi terlalu sedikit untuk dihangatkan Sendok nasi tertinggal di dalam panci saat penghangatan Menghangatkan nasi sisa dingin Tutup panci tidak tertutup rapat; panci dalam tidak dibersihkan Menghangatkan nasi sisa dingin Setelah daya dicabut saat proses memasak masih berlangsung																		
Item Pemeriksaan																			

Keterangan Tambahan

Jika masalah masih tidak teratasi setelah pemeriksaan, silakan hubungi pusat servis resmi perusahaan kami atau mitra distribusi produk. Dilarang keras membongkar dan memperbaiki alat ini sendiri oleh orang yang tidak ahli.

Pernyataan Khusus

Jika produk mengalami peningkatan teknis, perubahan terkait akan dimasukkan ke dalam buku petunjuk versi terbaru tanpa pemberitahuan terlebih dahulu. Segala perubahan bentuk luar dan warna produk mengikuti barang fisik asli.

PETUNJUK PERAWATAN


Keluarkan panci dalam dari badan utama penanak nasi, cuci bersih dengan sabun cuci piring rumah tangga, lalu lap hingga kering menggunakan kain lembut kering. Lap bagian luar penanak nasi hingga bersih dengan kain lembut bersih setiap kali selesai digunakan. (Gbr.9) Butiran nasi atau kotoran lain dapat menempel pada piring pemanas, kotoran tersebut harus dibersihkan guna menjamin kontak sempurna antara panci dalam dan piring pemanas. Buka tutup atas setelah setiap penggunaan, lap tutup dalam anti-kondensasi penghangat dan cincin segel hingga bersih dengan kain lembap. (Gbr.9) Saat membersihkan panci dalam, dilarang menggosok panci dengan sikat logam atau peralatan keras kasar lainnya, hal ini dapat merusak lapisan anti lengket panci dalam dan menyebabkan nasi menempel. Jika tidak digunakan, lap badan alat hingga kering, kemas dengan baik dan simpan di tempat yang kering.



(Gbr. 9)

metori

INSTRUCTION MANUAL

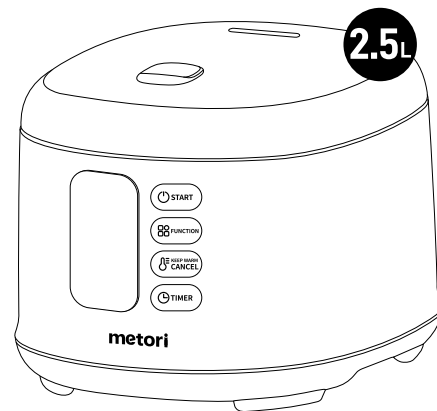

Titanium Coated Smart Rice Cooker

MTHCSG-KCRC-025-R1, MTHCSG-KCRC-025-W1

metori

Please read this instruction manual carefully before use. After reading, please keep it safe for future reference.

This manual is the first edition for this product series and contains all the functions of this series. Users should selectively read the manual based on the actual product model and configuration.

Titanium Coated Smart Rice Cooker



Table of Contents

Precautions	06
Product Parameters	07
Structure Introduction	07
Operation Instructions	08
Common Fault Analysis	09
Maintenance & Repair	10



WARNING & CAUTIONS

Read the instruction manual carefully before use to operate the rice cooker correctly and follow all safety precautions. Our products are continuously optimized, and specifications are subject to change without prior notice.

Our products are continuously optimized, and specifications are subject to change without prior notice.

CAUTIONS

1. Do not share the same multi-hole socket with other electrical appliances.
2. The water volume in the inner pot shall not exceed the maximum scale line, otherwise overflow may occur. (Fig.5)
3. Place the cooker on a flat and stable surface; do not put it in damp areas or near heat sources.
4. Do not immerse the whole appliance in water or rinse it directly, to avoid damaging electrical insulation. (Fig.6)
5. Do not wash rice inside the inner pot or knock the inner pot, which will deform the pot and prevent close fitting with the thermostat and heating plate, affecting cooking effect.
6. Do not switch on the power if the inner pot is not installed or there is no water in the inner pot.
7. Keep the appliance out of reach of infants and children; do not let children operate it alone.
8. The steam outlet is extremely hot during cooking. Do not touch it with hands or cover it with cloth to prevent scalding or machine failure. (Fig.7)
9. Only use the matching rice spoon (or wooden rice spoon) for serving rice; metal spoons will scratch the non-stick coating of the inner pot. Do not heat the inner pot on other stoves. (Fig.8)
10. Do not touch the heating plate immediately after cooking to avoid scalds.
11. This product is only suitable for household or similar indoor use.
12. Do not pull or twist the power cord with excessive force; do not unplug the plug with wet hands. When unplugging, hold the plug body instead of pulling the cord directly.
13. Check whether the power plug and cord are damaged before use to prevent electric shock or fire risks. Do not place flammable items near the socket during operation.
14. Unplug the power cord when the cooker is not in use.
15. Do not disassemble or repair the rice cooker by yourself.
16. If the power cord is damaged, it must be replaced with a special flexible wire or dedicated parts purchased from the manufacturer or its maintenance department.
17. Operating environment requirements: Ambient temperature: $-10^{\circ}\text{C} \sim +40^{\circ}\text{C}$; Maximum relative humidity: 90% (at 25°C); Altitude: $<2000\text{m}$



(Fig.5)



(Fig. 6)



(Fig.7)



(Fig.8)

WARMING CAUTIONS

1. Do not leave rice spoons or other sundries inside the pot during warming.
2. Cover the pot lid tightly during warming to avoid rice drying out.
3. Do not mix cold leftover rice or other food with freshly cooked rice for warming together.
4. Long-time warming will cause discoloration and strange taste of rice. The warming time shall not exceed 2 hours; consume the rice as soon as possible.



TECHNICAL SPECIFICATIONS

The specifications listed in this manual cover multiple models. Please refer to the specifications of the actual product received.

Product	metori Titanium Coated Smart Rice Cooker
Product Model	MTHCSG-KCRC-025-R1, MTHCSG-KCRC-025-W1
Color	Red, White
Product Specification	2,5 L
Rated Voltage	220-240 V~
Rated Frequency	50Hz
Rated Power	400W

PRODUCT STRUCTURE

Thank you for purchasing our brand rice cooker. To ensure optimal performance of this product, please read this instruction manual thoroughly before operation. Kindly keep the manual properly after reading for future reference.

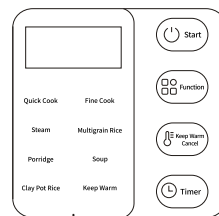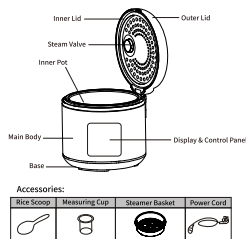

Display & Control Panel

OPERATION INSTRUCTIONS



I. Status Description

Power-on Status: When connected to a 220V power supply, the digital tube and all indicator lights will be illuminated for 1 second, accompanied by a single "beep" from the buzzer, then the appliance enters standby mode.

Standby Status: The digital tube displays "----"; only the function key and warming key are operable under this status.

II. Button Description (Button-type Panel)

Start Key: After selecting a function, press this key to activate the corresponding working mode. After setting the reservation duration, press this key to start the reservation countdown.

Function Key: Repeatedly press this key to cycle through functions in the following sequence: Quick Cook, Fine Cook, Steam Cook, Multigrain Rice, Porridge, Soup Stewing, Claypot Rice. When a function is selected, its corresponding indicator light and digital tube flash alternately, while the remaining function indicator lights stay steadily lit.

Warm/Cancel Key: Press this key under standby mode to activate the warming function; the warming indicator light turns on, other function indicator lights turn off, and the digital tube shows "bb". When the appliance is under reservation or working mode, press this key to terminate the ongoing function and revert to standby mode.

Reservation Key: After selecting a function, press this key to set the reservation time. The default reservation duration is 30 minutes, with an adjustable range of 30 minutes to 24 hours in 30-minute increments; you may long-press this key for rapid time adjustment.

III. Function Specification

Quick Cook: The Quick Cook indicator stays lit, and the digital tube plays marquee animation. A 10-minute countdown ("0:10") activates once rice is fully cooked. The buzzer beeps 3 times upon completion, then the unit enters warming mode.

Fine Cook: The Fine Cook indicator stays lit, and the digital tube plays marquee animation. A 10-minute countdown ("0:10") activates once rice is fully cooked. The buzzer beeps 3 times upon completion, then the unit enters warming mode.

Steam Cook: The Steam Cook indicator stays lit, and the digital tube shows a 60-minute countdown ("1:00"). The buzzer beeps 3 times upon completion, then the unit enters warming mode.

Multigrain Rice: The Multigrain Rice indicator stays lit, and the digital tube plays marquee animation. A 10-minute countdown ("0:10") activates once grains are fully cooked. The buzzer beeps 3 times upon completion, then the unit enters warming mode.

Porridge: The Porridge indicator stays lit, and the digital tube shows a 70-minute countdown ("1:10"). The buzzer beeps 3 times upon completion, then the unit enters warming mode.

Soup Stewing: The Soup Stewing indicator stays lit, and the digital tube shows a 90-minute countdown ("1:30"). The buzzer beeps 3 times upon completion, then the unit enters warming mode.

Claypot Rice: The Claypot Rice indicator stays lit, and the digital tube plays marquee animation. A 10-minute countdown ("0:10") activates once the dish is fully cooked. The buzzer beeps 3 times upon completion, then the unit enters warming mode.

TROUBLESHOOTING

The following conditions are not equipment malfunctions. Please troubleshoot item by item according to the table below.

Rice too hard	★		★	★	★	★							
Undercooked rice	★		★	★									★
Rice too soft	★			★		★							
Boiling water overflows	★	★			★								
Burnt crust at the bottom of inner pot	★	★	★	★								★	
Strange odor generated during warming mode		★		★	★		★	★	★	★	★	★	★
Rice discolors during warming mode				★	★		★						
Rice dries out during warming mode							★						
Abnormal Conditions	Inspection Items												
	Incorrect rice and water ratio	Unwashed rice	Uneven bottom of inner pot	Top lid not fully closed	Foreign matter attached to outer surface of inner pot or heating plate	Rice not fluffed up after cooking completes	Food kept warm for more than 12 hours, or insufficient rice quantity for warming	Rice spoon left inside the pot during warming	Rice spoon left inside the pot during warming	Warming cold leftover rice	Lid not tightly sealed; uncleaned inner pot	Power plug pulled out mid-cooking	

Supplementary Notes

If the problem persists after inspection, please contact our authorized service center or authorized distributor.

Unauthorized disassembly and repair by non-professional personnel are strictly prohibited.

Special Statement

Technical upgrades and optimizations of this product will be updated in the latest version of the instruction manual without prior notice. Any changes to product appearance and color shall be subject to the actual delivered product.

MAINTENANCE INSTRUCTIONS

Take out the inner pot from the rice cooker main body, clean it with household dishwashing detergent, then wipe it dry with a soft dry cloth. Wipe the exterior of the rice cooker clean with a soft clean cloth after each use. (Fig.9) Rice grains or other debris may adhere to the heating plate; these must be removed to ensure full contact between the inner pot and the heating plate. Open the upper lid after each use, wipe the anti-condensation inner lid for heat preservation and the sealing ring thoroughly with a damp cloth. (Fig.9) Do not scrub the inner pot with metal brushes or other hard rough tools during cleaning, as this will damage the non-stick coating and lead to rice sticking. When not in use, wipe the main unit dry, pack it properly and store it in a dry place.



(Fig. 9)



SCAN & EXPLORE MORE



**Scan to contact
Customer Service**
Scan untuk menghubungi
Customer Service kami



@metori.global
Follow us on TikTok for
more product updates.
Ikuti kami di TikTok untuk
update terbaru



@metori.global
Follow us on Instagram
for more product updates
Follow Instagram kami untuk
update produk terbaru



@metori.global
Subscribe to our YouTube channel
for more product updates
Subscribe YouTube kami untuk
update produk terbaru